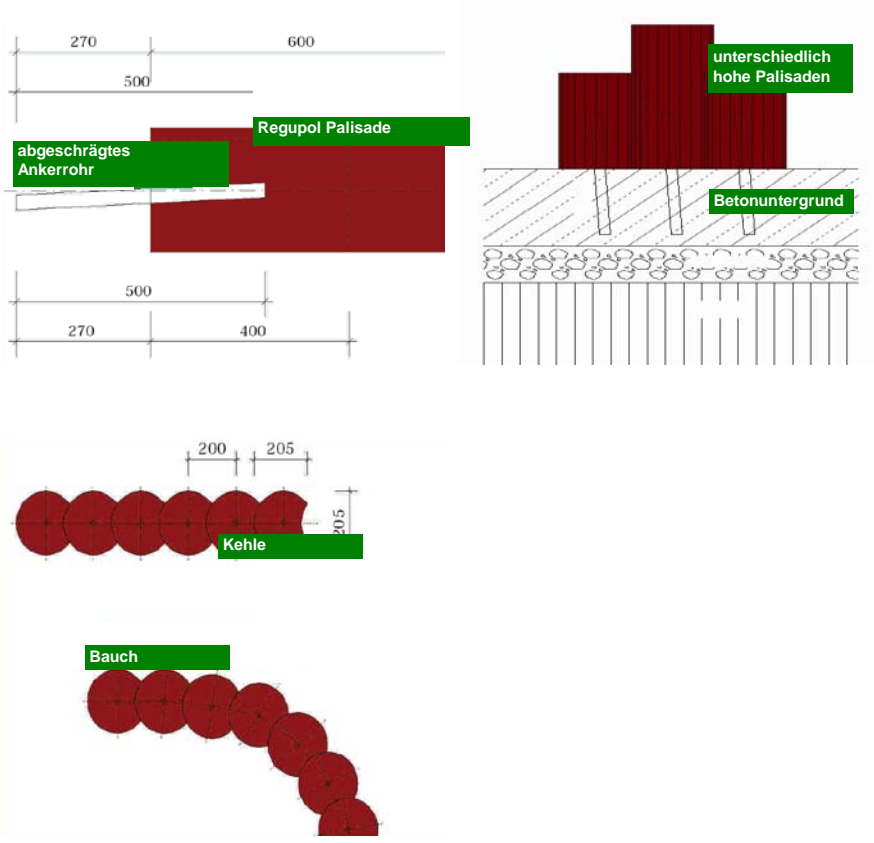


Verlegeanleitung

Regupol® Palisaden

Seite 1 von 1

<p>1.0. Vorbereitung der Tragschicht</p>	<p>Regupol® Palisaden werden in einem Betonuntergrund (C30/37, XF4 oder gemäß den örtlichen Anforderungen) verankert.</p> <p>Maße des Betonunterbaus: Höhe 50 cm Breite 30 cm</p> <p>Die Palisade wird mit dem leicht abgeschrägten Bodenanker höhen- und fluchtgerecht in den frischen Beton eingesetzt. Anschließend wird der Beton verdichtet.</p>
<p>2.0. Skizzen</p>	 <p>The technical drawings illustrate the installation of Regupol Palisade. The top left drawing shows a side view of a palisade with dimensions: 270 mm for the top width, 500 mm for the total length, and 600 mm for the total width. It labels the 'abgeschrägtes Ankerrohr' (beveled anchor pipe) and the 'Regupol Palisade'. The top right drawing shows a cross-section of the palisade in a 'Betonuntergrund' (concrete base), with a label for 'unterschiedlich hohe Palisaden' (palisades of different heights). The bottom left drawing shows a top view of the 'Kehle' (groove) between two palisades, with dimensions of 200 mm and 205 mm. The bottom right drawing shows a top view of the 'Bauch' (belly) of the palisade, with a dimension of 205 mm.</p>

Version 062010
Druckdatum: 30.06.2010